

Setting PAGE ALERT Tones

To Set/Change/Verify your TONE ALERT Pager Tones please do the following:

STEP #1 – Goto TONE ALERT channel

STEP #2 – Press the MENU Button:



Step-#3 – Scroll Down till you see P25 2T List then press MENU/ENTER Button.



Step-#4 – Scroll down and choose your tone list. Press MENU/ENTER



Step-#5 – Press the “C” Button on the front until you see TG and TONE. **DONE**



Repeat Steps 2-4 for the HSC FIRE DISP channel. **NOT STEP-#5!**